WIRELESS TABLET SERIES

U K

User's manual

V2.0

WIRELESS TABLET SERIES

Thank you for your purchase. Register your product via our Internet site at www.trust.com/register, so that you will be eligible for optimal guarantee and service support. You will also be automatically informed of the development of your and other Trust products.

U K

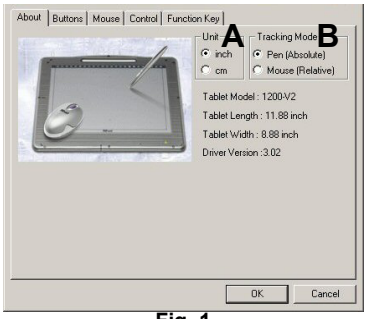

Fig. 1

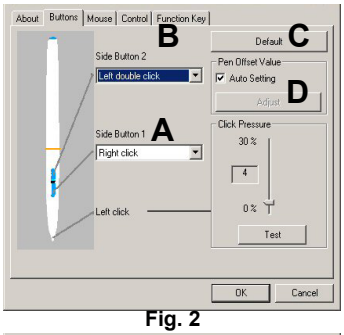

Fig. 2

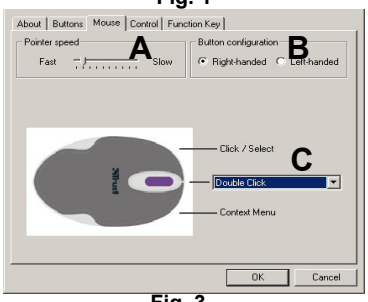

Fig. 3

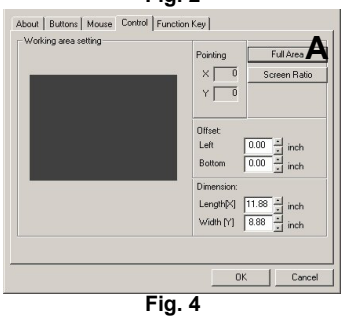

Fig. 4

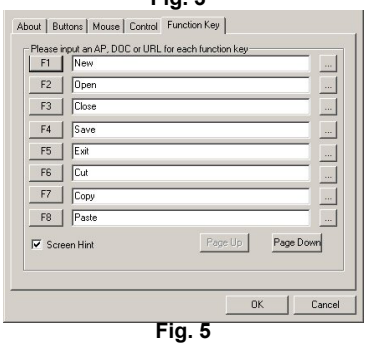

Fig. 5

1 Introduction

U K

This instruction manual is for users of the following TRUST WIRELESS TABLETS:

- TRUST 1200 WIRELESS SCROLL TABLET (Model 1200)
- TRUST 400 WIRELESS TABLET (Model 400)
- TRUST 200 WIRELESS TABLET (Model 200)
- TRUST 100 WIRELESS TABLET (Model 100)

Basic knowledge of computers is necessary to install this device.

Note: *The term wireless refers to the wireless pen (and mouse) which is (are) supplied with this device. The tablet is connected to the computer via a wire.*

Note: *The item number depends on which device you have purchased. Look at the bottom of the tablet or on the box for the correct item number.*

Note: *All the tablets have a pen. There are different accessories, depending on the device that you have purchased, such as a mouse or a mouse with a scroll wheel. Look at the contents of the box for the accessories supplied with your device.*

2 Approval

CE

This device meets the essential requirements and other relevant conditions of the applicable European directives. The Declaration of Conformity (DoC) is available at www.trust.com/*item no./*ce (for example, www.trust.com/14070/ce).

This wireless device works using induction instead of radio signals. It meets the essential requirements and other relevant conditions of R&TTE Directive 1999/5/EC and can be used in all EU countries. There may be restrictions for the use of this device outside of the EU. If this device is used outside of the EU, check whether this device meets the local regulations.

3 Preparing the tablet for use

3.1 Inserting the batteries

NOTE*: Inserting the batteries incorrectly will damage the device.*

NOTE: *Only replace the batteries with the same type of alkaline or rechargeable batteries (AAA).*

Read the Quick Installation Guide for more information.

4 Installation

NOTE: *The latest driver can be downloaded from www.trust.com/item no. Check whether a new driver is available and use this for the installation.*

NOTE: *Make sure all other programs are closed during the installation.*

NOTE: *Install the driver before connecting the tablet.*

4.1 Installing the driver

Read the Quick Installation Guide for instructions on how to install the driver.

5 Installing the software

Corel Painter Essentials is a drawing program which you can use with your Trust Tablet. The drawing program is on a separate CD-ROM.

5.1 Installing Corel Art Dabbler

NOTE: *Make sure all other programs are closed during the installation.*

NOTE: *In the example, the CD-ROM drive is indicated by "D:\". This may be different for your computer.*

1. Insert the Trust installation CD-ROM into your CD-ROM drive. The drawing program will start automatically. If it does not start automatically, carry out the following.
   a) Select 'Run' from the start menu.
   b) Type [D:\English\Setup.exe] to install the program in English, [D:\German\Setup.exe] to install the program in German or [D:\French\Setup.exe] to install the program in French.
2. Follow the on-screen instructions.
3. After the files have been installed, click 'Finish' to complete the installation process.

6 Using the tablet

NOTE: *Remove the pen/mouse from the work area if you use a different mouse (serial, PS/2 or USB).*

6.1 Configuring the work area

Click the tablet icon in the right-hand corner of the taskbar. Figure 1 will appear.

A	For selecting the measurement unit (inches or centimetres).
B	For selecting the tracking mode.

6.1.1 Tracking mode

Pen (Absolute): The position of the cursor is the same for both the tablet and the monitor.

Mouse (Relative): A small movement on the tablet produces a big movement on the monitor. This can be used to increase the size of the work area by, for example, using two monitors.

6.1.2 Using the tablet with two monitors

It is possible to increase the monitor area by using two monitors.

To do so, you must have installed a video card (VGA card) with two monitor outputs on your computer. You can also install a second video card on your computer, although this will not work for some types of video card. If it does not work, contact the supplier or manufacturer of your video card.
If you install a second video card, see the instruction manual provided with the video card.

6.2 Configuring the pen

1. Click the tablet icon in the right-hand corner of the taskbar. Figure 1 will appear.
2. Click the 'Buttons' tab. Figure 2 will appear.

6.2.1 Configuring the buttons

A	Assigns a function to button 1.
B	Assigns a function to button 2.
C	Returns to the default settings.
D	Automatic settings.
E	Configures the pen's pressure.

1. Various functions can be assigned to buttons A and B on the pen. To assign a different function, click the arrow on the right-hand side.
2. If you wish to undo the settings, click 'Default' (D) to return to the default settings.

6.2.2 Configuring the sensitivity

1. The pen pressure can be altered by moving the slide bar (E) up or down. The 'Auto Setting' (D) option must be unselected. The lower the percentage, the higher the sensitivity.
2. Click 'Test' to test the pen's pressure. An empty drawing window will appear in which you can test the pen's pressure.
3. Click the '**X**' in the top right-hand corner to close the window.
4. Click 'OK' to save the settings.

6.3 Mouse settings (only for models 1200, 400 and 200)

NOTE: *Depending on the device you have purchased, the box will contain either a mouse or a mouse with a scroll wheel.*

1. Click the tablet icon in the right-hand corner of the taskbar. Figure 1 will appear.
2. Click the 'Mouse' tab. Figure 3 will appear.

A	Mouse pointer speed.
B	Configures the mouse for left-handed or right-handed use.
C	Function of the middle mouse button.

3. Configure the mouse functions in the window which is displayed.
4. After you have made the desired alterations, click 'OK' to save the settings.
5. If the mouse does not work optimally, you can solve this by unselecting 'Auto Setting' in the 'Buttons' tab and manually changing the settings.
6. Click 'OK' to save the settings.

6.4 Configuring the work area

1. Click the tablet icon in the right-hand corner of the taskbar. Figure 1 will appear.
2. Click the ‘Control’ tab. Figure 4 will appear.
3. Alter the desired work area and click ‘OK’ to save the settings. The work area has now been configured as desired.
4. Click 'OK' to save the settings.

Click ‘Full Area’ (A) to use the entire work area.

6.5 Configuring the function buttons

The function buttons F1 to F12 correspond to the function buttons on your keyboard. The function buttons on your tablet will mostly be used for programs such as Microsoft Word or Microsoft Excel.

All models

	Function	Description
F1	New	Opens a new document in a program.
F2	Open	Opens a file in, for example, a program.
F3	Close	Closes a file in, for example, a program.
F4	Save	Saves a file in, for example, a program.
F5	Exit	Closes a program.
F6	Cut	Cut function.
F7	Copy	Copy function.
F8	Paste	Paste function.

Model 200 / 400 / 1200

	Function	Description
F9	Undo	Undoes the last operation.
F10	Control Panel	Opens the Windows Control Panel.
F11	Explorer	Opens Windows Explorer.
F12	WWW	Opens your Internet browser.

Model 1200

	Function	Description
F13	E-mail	Opens your e-mail program.
F14	Word	Opens Microsoft Word.
F15	Excel	Opens Microsoft Excel.
F16 to F24		These can be defined by the user.

6.5.1 Assigning functions to the function buttons (only for model 1200)

1. Double-click the tablet icon in the right-hand corner of the taskbar. Figure 1 will appear. Click the 'Function Key' tab. Figure 5 will appear.
2. Click ‘Page down’ or ‘Page up’ to scroll to the desired function button
3. Write the Internet address in the white bar or click ‘…’ and search for the file name of the desired program and click the file once to select it.
4. Click ‘OK’ to confirm the selection.

5. Select ‘Screen Hint’. The functions of the function buttons will then be visible on the screen when these are approached using the tablet mouse or the tablet pen.
6. Click 'OK' to save the settings. Repeat points 2, 3 and 4 for the other function buttons.
7. Click ‘OK’ again.

7 Tablet functions

All the tablets have a pen. There are different accessories, depending on the device that you have purchased, such as a mouse or a mouse with a scroll wheel. See the Quick Installation Guide for a summary of the tablet functions.

8 Using the software

Corel Art Dabbler is a drawing program which you can use with your Trust Tablet.

8.1 Working with Corel Art Dabbler

1. Open Corel Art Dabbler.
2. Click ‘Edit’ and select ‘Add page’
3. Open the tool drawer by pulling on the handle
4. Click the tools and the tool size (the red triangle) that you wish to use. Close the drawer after you have made your selection.
5. Select the colour that you wish to use from the current colour pallet at the front of the colour drawer or open the colour drawer and select a new colour pallet. Close the drawer when you are finished.
6. Open the structure drawer to select the paper.
7. Draw a picture in the drawing field. The line will become thicker by pressing harder.
8. Once you are finished, click ‘File’ and then ‘Save page as…’. Type the file name and select a file format, for example, BMP.
9. Click ‘Save’.
10. Click ‘File’ and select ‘Quit’ to close the program.

For more information, see the Corel Art Dabbler instruction manual included on the CD-ROM.

9 Troubleshooting

9.1 Replacing the point of the pen

When the point of the pen becomes worn, it can be replaced with one of the two spare points which are supplied with the device.

Carry out the following to replace the point of the pen.

1. Hold the pen firmly and carefully pull the point of the pen out of the pen using the metal pen point remover.
2. Insert the new point into the pen by carefully pushing it into the pen.
3. The pen is now ready for use.

Method

1. Read the solutions given below.
2. Check for up-to-date FAQs, drivers and instruction manuals on the internet (www.trust.com/Item No.)

!

Problem	Cause	Possible solution
Windows does not detect a new device after connecting the tablet.	The computer's USB port does not work.	Delete the USB port from the Device Manager and reinstall it.
The tablet is marked with an exclamation mark '!' in the 'Device Manager'.	The tablet is connected to a USB hub which does not have a power supply.	Connect the tablet to a USB hub which has a power supply or to a USB port on your computer.
The pen/mouse arrow shakes.	The tablet has been placed too close to the monitor causing interference.	Position the tablet further away from the monitor.
The tablet/mouse does not do anything.	The battery has been inserted incorrectly.	Reinsert the battery (see chapter 3.1).
	The battery is empty.	Replace the battery (see chapter 3.1).
The pen only works in the relative mode whilst the absolute mode has been selected.	The point of the pen is worn.	Replace the point of the pen as described in chapter 9.1.
The pen/ tablet mouse reacts too slowly or too quickly.	The pen's sensitivity has not been set correctly.	Adjust the pen/tablet mouse settings (see chapter 6.2).
The mouse buttons do not work or do not work correctly.	The pen has not been configured correctly which causes the mouse to not work correctly.	See chapter 6.3 for instructions on how to configure the buttons.
		Unselect 'Auto Setting' and manually configure the sensitivity in the 'Buttons' tab.
The default mouse (serial or PS/2) no longer works.	The default mouse has a conflict with the pen and the tablet, so these devices no longer work.	Remove the pen and the tablet mouse from the tablet when using the mouse.

Does the tablet work with other (drawing) programs?		The mouse function always works, although the sensitivity is not supported by all drawing programs. Contact the manufacturer of the software program to find out which functions the program supports.
The problem is not listed here.	The latest FAQs are available on the Internet.	Go to www.trust.com/item no. for FAQs and other product information.

If you still have problems after trying these solutions, please contact one of the Trust Customer Care Centers. You can find more information at the back of this instruction manual. Please have the following information available:

- The item number. This can be found on the bottom of the tablet or on the box.
- A good description of what does not work and when the problem occurs.

10 Warranty conditions

- Our products have a two-year manufacturer's warranty which is effective from the date of purchase.
- If there is a fault, return the product to your dealer and include a description of the fault, the proof of purchase and all the accessories.
- During the warranty period, you will receive a similar product if one is available. If no similar product is available, your product will be repaired.
- Please contact our help desk for missing components, such as the instruction manual, software or other components.
- The warranty becomes invalid if the product has been opened, if there is mechanical damage, if the product has been misused, if alterations have been made to the product, if the product has been repaired by a third party, in the case of negligence or if the product has been used for a purpose other than that originally intended.
- Excluded from the warranty:
  - Damage caused by accidents or natural disasters, such as fire, flood, earthquakes, war, vandalism or theft.
  - Incompatibility with hardware or software not stated in the minimum system requirements.
  - Accessories, such as batteries and fuses (if applicable).
- Under no circumstances will the manufacturer be held responsible for any incidental or consequential damage, including the loss of income or other commercial losses resulting from the use of this product.

Copyright disclaimer
It is forbidden to reproduce any part of this instruction manual without the permission of Trust International B.V.

SERVICE CENTRE

24 HOURS free service: www.trust.com

Residents in the UK and Ireland should contact:

	UK Office	
Mon - Fri	Phone	+44-(0)845-6090036
From 8:00 - 16:00	Fax	+31-(0)78-6543299

I residenti in Italia possono contattare:

lun - ven	**Ufficio italiano**	
9:00 – 17:00	Telefono	+39-(0)51-6635947
	Fax	+31-(0)78-6543299

Les habitants de la France et de l'Afrique du Nord peuvent contacter :

	Bureau français	
Lundi-vendredi	Téléphone	+33-(0)825-083080
De 9:00 à 17:00	Fax	+31-(0)78-6543299

Kontaktadresse für Einwohner Deutschlands:

	Deutsche Geschäftsstelle	
Mo – Fr	Telefon	+49-(0)2821-58835
9:00 - 17:00	Fax	+31-(0)78-6543299

Los habitantes de España pueden ponerse en contacto con:

	Oficina española	
lun – viernes		
De las 9:00 a las 17:00	Teléfono	+34-(0)902-160937
horas	Fax	+31-(0)78-6543299

Osoby mieszkające na terytorium Polski powinny skontaktować się:

	Biuro w Polska	
Pon do pią	Tel	+48-(0)22-8739812
w godz 09:00-17:00	Fax	+31-(0)78-6543299

Inwoners van Nederland kunnen contact opnemen met:

	Kantoor Nederland	
ma – vr	Tel	+31 (0)78-6543387
9:00 - 17:00 uur	Fax	+31-(0)78-6543299

All other countries / Alle anderen Länder / Tous les autres pays
Tutti gli altri paesi / Todos los demás países / Alle andere landen

	European Head Office	
Mon - Fri	Phone	+31-(0)78-6549999
From 9:00 - 17:00	Fax	+31-(0)78-6543299